




BROAN - EW54 SERIES - RANGE HOODS INSTALLATION GUIDE

INSTALLATION INSTRUCTIONS

BROAN® Elite

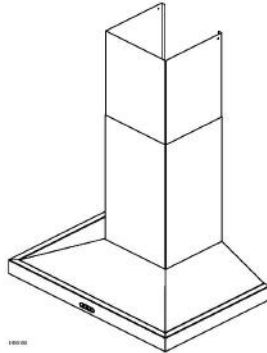

EW54 SERIES

△ INTENDED FOR DOMESTIC COOKING ONLY △
READ AND SAVE THESE INSTRUCTIONS

INSTALLER: LEAVE THIS MANUAL WITH HOMEOWNER.
HOMEOWNER: USE AND CARE INFORMATION ON PAGE 13.



Broan-NuTone LLC, Hartford, Wisconsin www.broan.com 1-800-558-1711
REGISTER YOUR PRODUCT ONLINE AT: www.broan.com

23136 rev. 03

1. PREPARE THE INSTALLATION

△ WARNING


When performing installation, servicing or cleaning the unit, it is recommended to wear safety glasses and gloves.
NOTE: Before proceeding to the installation, check the contents of the box. If items are missing or damaged, contact the manufacturer. Make sure that the following items are included:

- Hood
- Accessories
 - Decorative flue assembly (lower and upper flues)
 - Hood mounting bracket
 - Upper flue mounting bracket
 - 2 micromesh filters
 - 6" round adapter/damper (for vertical discharge), in a bag
 - 3/4" x 10" adapter/damper (for horizontal or vertical discharge)
 - Suction cup (taped to one of the GU12 halogen bulbs)
- Bag of parts including: 5 no. 8 x 1 1/2" countersunk screws, 8 no. 8 x 3/4" screws, 6 no. 8 x 3/8" screws, 8 drywall anchors, 3 washers, 2 no. 8 x 1 1/2" screws, 2 neoprene pieces. If need be, discard extra hardware.

Parts sold separately:

- Duct, elbows, wall or roof caps.
- Optional flue extension for 10-ft. ceilings model FXE54BLS.
- Non-duct kit model HIRKMBLS, mandatory for non-ducted installation.

NOTE: The maximum ceiling height must not exceed 9 ft. when using a non-duct kit.

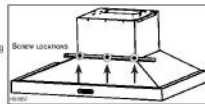

Before installation, remove and discard the shipping bracket (in grey) and its retaining screws. See illustration on the right.

2. SELECT INSTALLATION TYPE


NOTE: During the installation, protect countertop and/or cooktop.

2.1 Non-Ducted Installation

The HIRKMBLS non-duct kit is required for a non-ducted installation.

2.2 Ducted Installation

Plan where and how the ductwork will be installed. Install pre-attached ductwork, elbows and roof or wall cap depending on the type of installation. For vertical discharge, use 6" round or 3/4" x 10" ductwork and for horizontal discharge use 3/4" x 10" ductwork only. Use metal foil duct tape to seal duct joints.

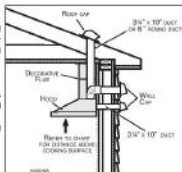

2.3 ALL INSTALLATIONS

The minimum hood distance above cooktop is 24" (30" over a gas range). A maximum of 30" above cooktop is recommended for best capture of cooking impurities.

Distances over 30" are at the installer and users discretion providing that ceiling height and decorative flue length allow it.

CEILING HEIGHT	MINIMUM HOOD DISTANCE ABOVE ELECTRIC RANGE COOKTOP	MINIMUM HOOD DISTANCE ABOVE GAS RANGE COOKTOP
8 ft.	24 in.	30 in.
9 ft.	28 1/2 in.	30 in.
10 ft.*	28 1/2 in.	30 in.

* 10-ft. ceilings require flue extension model FXE54BLS (sold separately).

3

△ WARNING

TO REDUCE THE RISK OF FIRE, ELECTRIC SHOCK OR INJURY TO PERSONS, OBSERVE THE FOLLOWING:

1. Use this unit only in the manner intended by the manufacturer. If you have questions, contact the manufacturer at the address or telephone number listed in the warranty.
2. Before servicing or cleaning unit, switch power off at service panel and lock service disconnecting means to prevent power from being switched on accidentally. When the service disconnecting means cannot be locked, securely fasten a prominent warning device, such as a tag, to the service panel.
3. Installation work and electrical wiring must be done by qualified personnel in accordance with all applicable codes and standards, including fire-rated construction codes and standards.
4. Sufficient air is needed for proper combustion and exhausting of gases through the flue (chimney) of fuel burning equipment to prevent backdrafting. Follow the heating equipment manufacturer's guidelines and safety standards such as those published by the National Fire Protection Association (NFPA) and the American Society for Heating, Refrigeration and Air Conditioning Engineers (ASHRAE) and the local code authorities.
5. When cutting or drilling into wall or ceiling, do not damage electrical wiring and other hidden utilities.
6. Ducted fans must always be vented outdoors.
7. Do not use this unit with any solid-state speed control device.
8. To reduce the risk of fire, use only metal ductwork.
9. This unit must be grounded.
10. When applicable, local regulations comprise more restrictive installation and/or certification requirements, the aforementioned requirements prevail on those of this document and the installer agrees to conform to these at his own expense.

TO REDUCE THE RISK OF A RANGETOP GREASE FIRE:

- a) Never leave surface units unattended at high settings. Boilovers cause smoking and greasy splatters that may ignite. Heat oils slowly on low or medium settings.
- b) Always turn power hood ON when cooking at high heat or when flaming food (i.e.: Crispes Suzette, Chermouche, Peppercorn Beef Fambles).
- c) Clean ventilating fans frequently. Grease should not be allowed to accumulate on fan, filters or in exhaust ducts.
- d) Use proper pan size. Always use cookware appropriate for the size of the surface element.

△ WARNING

TO REDUCE THE RISK OF INJURY TO PERSONS IN THE EVENT OF A RANGE TOP GREASE FIRE, OBSERVE THE FOLLOWING:

1. SMOTHER FLAMES with a close-fitting lid, cookie sheet or metal tray, then turn off the burner. BE CAREFUL TO PREVENT BURNS. IF THE FLAMES DO NOT GO OUT IMMEDIATELY, EVACUATE AND CALL THE FIRE DEPARTMENT.
2. NEVER PICK UP A FLAMING PAN — You may be burned.
3. DO NOT USE WATER, including wet dishcloths or towels — This could cause a violent steam explosion.
4. Use an extinguisher ONLY if:
 - A. You own a Class ABC extinguisher and you know how to operate it.
 - B. The fire is small and contained in the area where it started.
 - C. The fire department has been called.
 - D. You can fight the fire with your back to an exit.

* Based on "Kitchen Fire Safety Tips" published by NFPA.



CAUTION

1. For indoor use only.
2. For general ventilating use only. Do not use to exhaust hazardous or explosive materials and vapors.
3. To avoid motor bearing damage and noisy and/or unbalanced impellers, keep drywall spray, construction dust, etc. off power unit.
4. Your hood motor has a thermal overload which will automatically shut off the motor if it overheats. The motor will restart when it cools down. If the motor continues to shut off and restart, have the hood serviced.
5. The minimum hood distance above cooktop is 24" (30" over a gas range). A maximum of 30" above cooktop is recommended for best capture of cooking impurities.
6. Two installers are recommended because of the large size and weight of this unit.
7. To reduce the risk of fire and to properly exhaust air, be sure to duct air outside — Do not exhaust air into spaces within walls or ceiling or into attic, crawl space or garage.
8. Because of the high exhausting capacity of this hood, you should make sure enough air is entering the house. Open a window inside to or in the kitchen.
9. To reduce the risk of fire and electrical shock, the Broan Elite EW54 Series models should only be installed with their own built-in blower.
10. When used in recirculation mode, to reduce the risk of fire and shock, use only conversion kit model HIRKMBLS.
11. Please read specification label on product for further information and requirements.

2


2. SELECT INSTALLATION TYPE (CONT'D)

Refer to illustrations below to locate duct opening according to discharge type chosen (grey parts to be installed later).

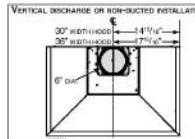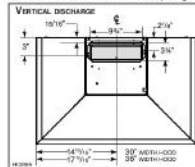

3. REMOVE GREASE FILTERS

Rest the range hood on a table. Remove tapes on filters. Remove filters from the range hood by pushing them down (1) and tilting them (2). Set aside the filters. Remove both styrofoam pieces and tape from under the blower and discard.

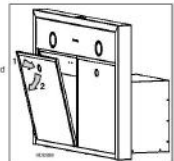

4



#2 Chootoo Road, South Aranguez, San Juan, Trinidad






BROAN - EW54 SERIES - RANGE HOODS INSTALLATION GUIDE

4. CHOOSE THE OPENING


FOR VERTICAL DISCHARGE OR NON-DUCTED INSTALLATION:

From outside the unit, remove the knockout in order to clear vertical discharge opening (see illustration beside).

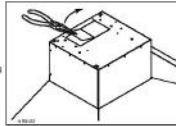

FOR HORIZONTAL DISCHARGE:

From outside the unit, remove the knockout from back of hood (see illustration beside).

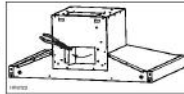


5. BLOWER REMOVAL (HORIZONTAL DISCHARGE ONLY)

The EW54 Series range hoods are factory shipped with the blower mounted for a vertical discharge configuration. For a horizontal discharge configuration, disassemble the blower from the inner top of the hood (see procedure below). It will be assembled to the inner back of the hood once the hood is mounted on the wall.

1) Unplug the blower.



2) Using a 5/16" socket, or a Robertson or a Phillips no. 2 screwdriver, remove the 4 blower mounting screws (2 on each side) from the inner top of the hood (see picture below). Set the blower and screws aside.

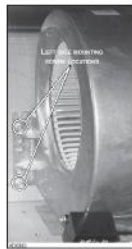


5

8. INSTALL HOOD MOUNTING BRACKET

WARNING

When cutting or drilling into wall, do not damage electrical wiring and other hidden utilities.


Construct hood wall framing that is even with the surface of wall studs. Wood wall framing must be at least 1/2" thick and 2" high. Fasten wood wall framing to wall studs for a solid installation. Make sure that the height of the framing will allow the mounting bracket to be secured to the framing within the dimensions shown. After wall surface is finished, carefully center and level the hood mounting bracket over installation location. Secure it to wall framing using 3 no. 8 x 1 1/2" screws. Using a level, draw a vertical line up to the ceiling starting from the mounting bracket center.

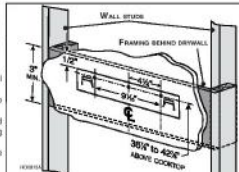

36 1/8" = BOTTOM OF HOOD 24" ABOVE COOKTOP
42 7/8" = BOTTOM OF HOOD 30" ABOVE COOKTOP

9. INSTALL UPPER FLUE MOUNTING BRACKET (DUCTED INSTALLATION ONLY)

Center the upper flue mounting bracket with the center line previously drawn in step 8 and place it flush with the ceiling. Use the upper flue mounting bracket as a template to mark the position of its screws. Drill the 3 screw holes using a 3/16" drill bit. Insert the included drywall anchors into the drilled holes (1 per hole). Secure the upper flue bracket to the wall using 3 no. 8 x 3/4" screws. Ensure that the bracket is tight against the wall.

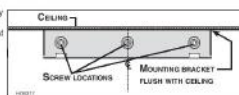

10. INSTALL THE HOOD


WARNING

BE CAREFUL when installing the decorative flue and hood, they may have sharp edges.

CAUTION

DO NOT REMOVE the protective plastic film covering the decorative flue (upper & lower) yet.

- Align the hood and center it above the hood mounting bracket. Gently lower the hood until it securely engages the bracket.
- Level the hood.
- With the hood hanging in place, mark both hole locations on wall (2 embossed holes on back of hood; see illustration at right).
- Remove the hood.
- Drill through both marked holes on wall using a 3/16" drill bit. Insert the included drywall anchors into the drilled holes (see for each hole).
- Hang the hood to the wall bracket.
- Secure the hood to the wall using 2 no. 8 x 3/4" screws and 2 washers.

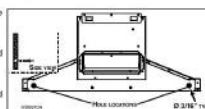


NOTE: ILLUSTRATION ABOVE REPRESENTS HORIZONTAL EXHAUST CONFIGURATION, BUT IT ALSO APPLIES TO ALL CONFIGURATIONS.

7


6. INSTALL ADAPTER/DAMPER (6" ROUND OR 3 1/4" x 10")

Mount the 6" round adapter/damper (included in bag) using 4 no. 8 x 3/8" screws (included) or the 3 1/4" x 10" adapter/damper to the hood using 2 no. 8 x 3/8" screws (included). Seal the adapter/damper to the hood using metal foil duct tape.


VERTICAL DISCHARGE 6" ROUND AND NON-DUCTED INSTALLATION ONLY

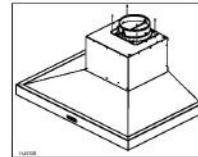

VERTICAL DISCHARGE 3 1/4" x 10"

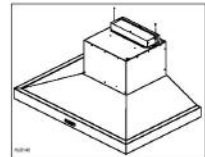

HORIZONTAL DISCHARGE 3 1/4" x 10" ONLY

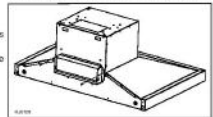

Secure the adapter/damper to the back of the hood using 2 no. 8 x 3/8" screws (included). Seal the adapter/damper to the hood using metal foil duct tape.

NOTE: The wall ducting must be properly prepared to receive the adapter. Before performing the installation, make sure the adapter fits easily in the duct.

7. WIRING INSTALLATION


WARNING

Improper grounding can result in a risk of electric shock. Consult a qualified electrician if the grounding instructions are not completely understood, or if there is any doubt as to whether the appliance is properly grounded. Do not use an extension cord. If the power supply cord is too short, have a qualified electrician install an outlet near the appliance, in accordance with all applicable codes and standards. Turn off electrical power at service entrance before wiring.

GROUNDING INSTRUCTIONS

This appliance must be grounded. In the event of an electrical short circuit, grounding reduces the risk of electric shock by providing an escape wire for the electric current. This appliance is equipped with a cord having a grounding wire with a grounding plug. The plug must be plugged into an outlet that is properly installed and grounded.

Position the outlet within the space covered by the decorative flue. Place the outlet at a maximum distance of 24" from where the cord exits from the hood. The center of the outlet must be positioned at 31" from the center of the future hood location (as illustrated beside). Make sure this does not interfere with a mounting bracket fastening area or with the decorative flue (where the flue touches the wall).

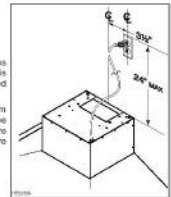

6


11. REINSTALL BLOWER (HORIZONTAL DISCHARGE ONLY)

1. Position the blower on the inner back of the hood, as shown on the right.

2. Using a 5/16" socket, or a Robertson or a Phillips no. 2 screwdriver and the 4 screws previously removed, secure the blower to the hood.

NOTE: In order to ease installation, before mounting the blower, prepare the screw holes by screwing all 4 screws without the blower, then remove and mount the blower.

3. Plug the blower connector back in and plug hood power cord into the outlet.

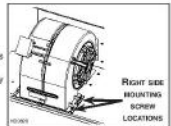


12. PLENUM INSTALLATION (NON-DUCTED INSTALLATION ONLY)

Remove the shipping tape retaining the lower and upper plenum plates with the 6" round adapter together. Carefully align the upper aluminum plate central notch with the line traced in step 8 (see inset at right) and place it flush to the ceiling. Use the plate as a template to mark the position (A) of its screws.

NOTE: To ease installation, there are many screw configurations (on ceiling and 2 in wall, on each side. Only 4 screws are needed to hold the top plenum plate.


Insert the included drywall anchors in the marked holes, then secure the upper plate using 4 no. 8 x 3/4" screws and washers (included with non-ducted kit). Make sure the plate is tight against the wall and ceiling.

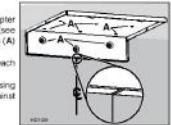

Using 4 no. 8 x 3/8" provided screws, assemble the 6" round adapter to the lower plenum plate.



Assemble the lower plenum plate and 6" round adapter assembly to the upper plate by inserting both tabs of the top plenum plate to their corresponding slots in lower plenum plate. Secure the plenum assembly using 2 no. 8-18 x 3/8" screws (included).

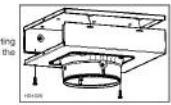

8








BROAN - EW54 SERIES - RANGE HOODS INSTALLATION GUIDE

13. DUCT CONNECTION (VERTICAL DISCHARGE AND NON-DUCTED INSTALLATION ONLY)

VERTICAL DISCHARGE:
Plug hood power cord into the outlet. Slide a 6" round or a 3/4" x 10" metal duct over the adapter/damper on the hood. Use metal foil duct tape to seal the joint.

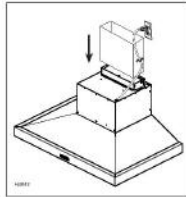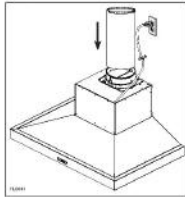

NON-DUCTED INSTALLATION:
Plug hood power cord into the outlet. Slide a 6" round flexible metal duct (included) over the adapter/damper on the hood. Use metal foil duct tape to seal the joint.

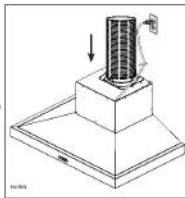


Stretch the flexible metal duct up to the plenum, over the adapter. Use metal foil duct tape to seal the joint.




9

15. INSTALL DECORATIVE FLUE


ALL INSTALLATIONS:
Carefully slide in place decorative flue base (notches and first) in the groove (shaded part in inset at right) behind the exterior wall of the top of the hood.

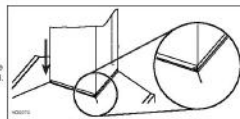

DUCTED INSTALLATION:
Slide up the upper flue until it is aligned with its mounting bracket. The bracket must be inside the flue. Secure the upper flue to its bracket using 2 no. 8 x 3/8" screws (included). See illustration beside.
NOTE: Duct not shown in illustration to ease understanding.

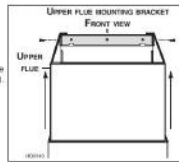

NON-DUCTED INSTALLATION:
Slide the upper flue up to the ceiling. The plenum must be inside the flue. Secure the upper flue to the plenum sides using 4 no. 8 x 1/2" black screws (2 per side, included).
NOTE: Ceiling not shown in illustration to ease understanding.

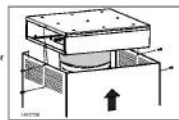


ALL INSTALLATIONS:
Remove protective plastic film covering the upper flue.

11

14. PREPARE THE DECORATIVE FLUE

DUCTED INSTALLATION:
Remove protective plastic film covering the lower flue only. Peel off both corners at the top of the upper flue (note that upper part has one hole on left and right sides; see image on the right). Position the lower flue rear notches down. Gently slide upper flue inside lower flue.

Both lower and upper flues are included with the hood, but for a 10-foot ceiling, discard the provided upper flue and use the optional flue extension, part no. FXE54BLS (sold separately).

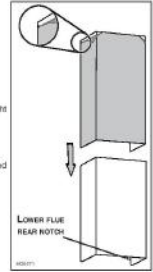


NON-DUCTED INSTALLATION:
Remove protective plastic film covering the lower flue only. **NOTE:** Do not use the upper decorative flue included with the hood. Peel off the plastic film covering both top corners of the upper decorative flue (included with the non-duct kit). Position the lower flue rear notches down (the ones with the 45° angle). Gently slide upper flue inside lower flue, levers end up.



10

16. REINSTALL FILTERS

Rear filters springs in range hood inside rear groove. Using finger clip, lift up the filters into position. Make sure both screws located in the front panel edge of the hood are securely engaged in both filters oval holes (A) after installation.

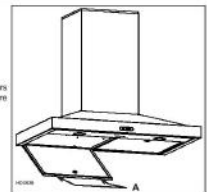


17. LIGHTING

The Broan Elite EW54 Series range hoods require two shielded Halogen Bulbs (120 V, 50 W max., MR16 or PAR16 with GU10 base), included. See service parts list for replacement bulbs.

WARNING

Do not touch lamps during or soon after operation. Burns may occur. In order to prevent the risk of personal injury, only install shielded halogen lamps. Also, never install a cool beam, a dichroic lamp, a lamp not suitable for use in recessed luminaires or identified for use in enclosed fixtures.

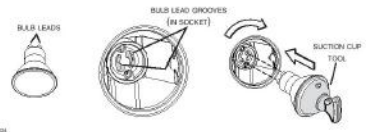

- Align the bulb leads with the small indentations located on the border of the lamp location on hood (see inset above), then install the bulbs by placing the bulb leads into their grooves in the socket.
- Gently push upwards and turn clockwise until secure.

NOTE: The suction cup tool (included with hood) can be used to install and remove light bulbs. Press suction cup tool on bulb and rotate counterclockwise to remove bulb or clockwise to install bulbs.

CAUTION

Most GU10 LED replacement bulbs commonly found on the market are not designed for use in a cooking environment and might not perform as advertised. Their usage with this product is not recommended.

12





BROAN - EW54 SERIES - RANGE HOODS INSTALLATION GUIDE

18. CARE

⚠ WARNING

Before servicing or cleaning the unit, switch power off at service panel and lock service panel to prevent power from being switched on accidentally. When the service disconnect means cannot be locked, securely fasten a prominent warning device, such as a tag, to the service panel.

Grease Filters

The grease filters should be cleaned frequently. Use a warm dishwashing detergent solution. Grease filters are dishwasher safe. Clean all-metal filters in the dishwasher using a non-phosphate detergent. Discoloration of the filters may occur if using phosphate detergents, or as a result of local water conditions - but this will not affect filter performance. This discoloration is not covered by the warranty. To minimize or prevent discoloration, hand wash filters using a mild detergent.

Hood cleaning

- | | |
|---|---|
| <p>Do:</p> <ul style="list-style-type: none"> Regularly wash with clean cloth or rag soaked with warm water and mild phosphate-free soap or liquid dish detergent. Always clean in the direction of original polish lines. Always rinse well with clear water (2 or 3 times) after cleaning. Wipe dry completely. You may also use a specialized household stainless steel cleaner. | <p>Don't:</p> <ul style="list-style-type: none"> Use any steel or stainless steel wool or any other scrapers to remove stubborn dirt. Use any harsh or abrasive cleansers. Allow dirt to accumulate. Let plaster dust or any other construction residues reach the hood. During construction/renovation, cover the hood to make sure no dust stays to stainless steel surface. |
|---|---|

Avoid when choosing a detergent:

- Any cleaners that contain bleach will attack stainless steel.
- Any products containing chlorine, fluoride, iodide, bromide will deteriorate surfaces rapidly.
- Any combustible products used for cleaning such as acetone, alcohol, ether, benzol, etc., are highly explosive and should never be used close to a range.

19. OPERATION

Always turn ON your hood before you begin cooking in order to establish an air flow in the kitchen. Let the blower run for a few minutes to clear the air after you turn off the range. This will help keep the whole kitchen cleaner and fresher.



BLOWER BUTTON

When blower is OFF, press this button to turn ON the blower at the last saved speed. If there was no speed saved, the blower will be set on LOW speed.
NOTE: When LOW speed is activated from OFF, the blower starts on MEDIUM speed for a very short lapse of time, and then returns to LOW speed.

To change the blower speed, press on this button again until the desired speed is reached (from LOW to MEDIUM to HIGH speed to OFF). Each time a blower speed is activated, a beep is heard and LED indicators light up to show the corresponding speed chosen (lower LED for LOW speed, lower and center LEDs for MEDIUM speed and all LEDs for HIGH speed).

When blower is on (no matter the speed level), press and hold this button until the beep sound ends; this will turn off the blower and save this blower speed to memory.

LIGHT BUTTON

When lights are OFF, press once on this button to turn ON the lights at the last saved setting. If there was no light setting saved, the lights will be set on LOW intensity. Press another time to set the lights on HIGH intensity. Pressing another time after the HIGH setting will turn OFF the lights. Each time the lights are turned ON, a beep is heard and LED indicators light up to show the corresponding intensity chosen (lower LED for LOW and both LEDs for HIGH).


When lights are on (no matter the lighting level), press and hold this button until the beep sound ends; this will turn off the lights and save the chosen light intensity.

FILTER CLEANING REMINDER

When it is time to clean the hood and filters, the 3 blower button LED indicators will flash slowly for 30 seconds after turning the blower OFF. This will happen every time the blower is turned OFF until the filter cleaning reminder has been reset. Once the cleaning is done, reset the filter cleaning reminder indicators by pressing on blower button for 3 seconds during the 30 seconds the 3 blower button LED indicators flash slowly.

13


21. SERVICE PARTS

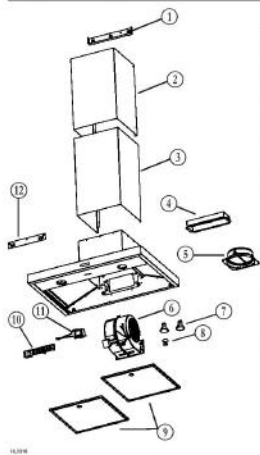

Qty	Part No.	Description	Qty	Ref
1	SV13673	SPRINKLER HOODING BRACKET	1	1
2	SV13659	FLANGE BRACKET PLATE	1	1
2	SV13658	FLANGE BRACKET PLATE	1	1
2	SV13726	1/2" x 1/2" SCREW (SUS304)	1	1
2	SV13662	FLANGE BRACKET PLATE	1	1
2	SV13668	FLANGE BRACKET PLATE (ALUMINUM)	1	1
7	SV13661	1/8" x 5/16" GFLS (SUS)	2	2
1	SV13660	FLANGE BRACKET PLATE	1	1
3	9002503	FLANGE BRACKET PLATE (S)	2	2
10	SV13646	EXHAUST MOTOR LED (BLACK HOOD OPTION)	1	1
11	SV13645	EXHAUST MOTOR LED (SILVER HOOD OPTION)	1	1
12	9000014	EXHAUST MOTOR LED (S)	1	1
1	SV13674	FLANGE BRACKET PLATE	1	1
1	SV13675	FLANGE BRACKET PLATE	1	1
PARTS NOT SHOWN:				
1	SV13627	2x 4x 4" COLLECTOR BAG (SUS)	1	1
1	SV13627	2x 4x 4" COLLECTOR BAG (SUS)	1	1
1	SV13627	2x 4x 4" COLLECTOR BAG (SUS)	1	1
1	SV13627	2x 4x 4" COLLECTOR BAG (SUS)	1	1
1	SV13627	2x 4x 4" COLLECTOR BAG (SUS)	1	1

REPLACEMENT PARTS AND REPAIRS
In order to ensure your unit remains in good working condition, you must use Broan-NuTone LLC genuine replacement parts only. Broan-NuTone LLC genuine replacement parts are specially designed for each unit and are manufactured to comply with all applicable certification standards and maintain a high standard of safety. Any third party replacement part used may cause serious damage and drastically reduce the performance level of your unit, which will result in premature failure. Broan-NuTone LLC recommends to contact a certified service depot for all replacement parts and repairs.

Non-DUCT KIT MODEL HRKMBLS

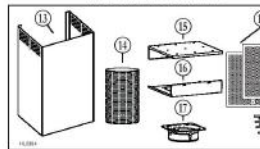


Qty	Part No.	Description	Qty
1	SV13629	REARVIEW KIT (SUS) DECORATIVE BLUE CHIMNEY	1
14	SV13705	BLACK FINISHED STEEL	1
15	SV13628	EXHAUST MOTOR LED (SUS)	1
15	SV13628	EXHAUST MOTOR LED (SUS)	1
17	SV13672	EXHAUST MOTOR LED (SUS)	1
18	SV13672	EXHAUST MOTOR LED (SUS)	1
19	SV13627	EXHAUST MOTOR LED (SUS)	1
PARTS NOT SHOWN:			
1	SV13623	2x 4x 4" COLLECTOR BAG (SUS)	1
1	SV13623	2x 4x 4" COLLECTOR BAG (SUS)	1
1	SV13623	2x 4x 4" COLLECTOR BAG (SUS)	1
1	SV13623	2x 4x 4" COLLECTOR BAG (SUS)	1

* Not shown.

15

20. WIRING DIAGRAM

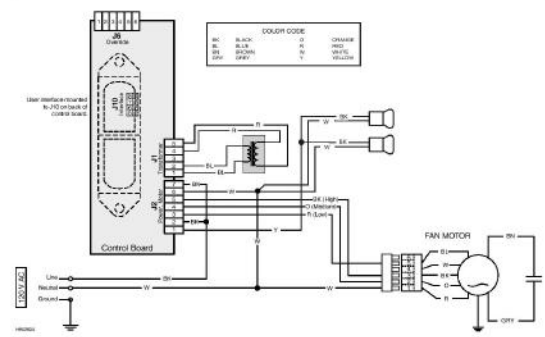

14

22. WARRANTY

ONE-YEAR LIMITED WARRANTY FOR BROAN ELITE PRODUCTS

Broan-NuTone LLC (Broan-NuTone) warrants to the original consumer purchaser of Broan Elite products that such products will be free from defects in materials or workmanship for a period of one year from the date of original purchase. THERE ARE NO OTHER WARRANTIES, EXPRESS OR IMPLIED, INCLUDING, BUT NOT LIMITED TO, IMPLIED WARRANTIES OF MERCHANTABILITY OR FITNESS FOR A PARTICULAR PURPOSE.

During this one-year period, Broan-NuTone will, at its option, repair or replace, without charge, any product or part which is found to be defective under normal use and service.

THIS WARRANTY DOES NOT EXTEND TO FLUORESCENT LAMP STARTERS, TUBES, HALOGEN AND INCANDESCENT BULBS, FUSE, FILTERS, DUCTS, ROOF CAPS, WALL CAPS AND OTHER ACCESSORIES FOR DUCTING. This warranty does not cover (a) normal maintenance and service of (b) any products or parts which have been subject to misuse, negligence, accident, improper maintenance or repair (other than by Broan-NuTone), faulty installation or installation contrary to recommended installation instructions. The duration of any implied warranty is limited to the one-year period as specified for the express warranty. Some States do not allow limitation on how long an implied warranty lasts, so the above limitation may not apply to you.

BROAN-NUTONE'S OBLIGATION TO REPAIR OR REPLACE, AT BROAN-NUTONE'S OPTION, SHALL BE THE PURCHASER'S SOLE AND EXCLUSIVE REMEDY UNDER THIS WARRANTY. BROAN-NUTONE SHALL NOT BE LIABLE FOR INCIDENTAL, CONSEQUENTIAL OR SPECIAL DAMAGES ARISING OUT OF OR IN CONNECTION WITH PRODUCT USE OR PERFORMANCE. Some States do not allow the exclusion or limitation of incidental or consequential damages, so the above limitation or exclusion may not apply to you.

This warranty gives you specific legal rights, and you may also have other rights, which vary from State to State. This warranty supersedes all prior warranties.

To qualify for warranty service, you must (a) notify Broan-NuTone at one of the addresses or telephone number stated below, (b) give the model number and part identification and (c) describe the nature of any defect in the product or part. At the time of requesting warranty service, you must present evidence of the original purchase date.

Broan-NuTone LLC, 926 W. State Street, Hartford, Wisconsin 53027 www.broan.com 1-800-658-1711

16



#2 Chootoo Road, South Aranguez, San Juan, Trinidad

